# Technical Information iTHERM ModuLine TM101

RTD or thermocouple temperature probe for direct installation in various industrial applications



# Metric version with basic technology

#### Application

- Universal range of application
- For use in non-hazardous areas
- Measuring range: -50 to +650 °C (-58 to +1202 °F)
- Pressure range up to 50 bar (725.2 psi)
- Degree of protection: up to IP 68

#### Head transmitter

Endress+Hauser transmitters are available with enhanced accuracy and reliability compared to directly wired sensors. Easy customizing by choosing one of the following outputs and communication protocols:

Analog output 4 to 20 mA, HART®

#### Your benefits

- Excellent value for money and fast global delivery
- User-friendly product selection, smart design for easy maintenance
- Wide range of process connections: thread and compression fittings
- Bluetooth® connectivity (optional)

# Table of contents

Function and system design	)
iTHERM ModuLine - thermometer for general applications	3
Measuring principle	
Measuring system	-
Modular design	
iviouului uesigii	
Input	7
Measured variable	-
Measuring range	
ivieasuring range	,
Output	7
Output signal	7
Family of temperature transmitters	7
running of temperature transmitters	,
Power supply	8
Terminal assignment	8
Cable entries	10
Connectors	10
Overvoltage protection	11
overvoltage protection	
Performance characteristics	11
	11
	12
Influence of ambient temperature	12
Self heating	13
Response time	13
Calibration	13
Insulation resistance	14
Installation	14
Orientation	14
Installation instructions	15
	15
1 3	15
	15
Humidity	15
Climate class	
Degree of protection	15
Shock and vibration resistance	15
Electromagnetic compatibility (EMC)	15
Dwagag	16
	16
Process temperature range	
Process pressure range	16
Mechanical construction	16
Design, dimensions	16
Weight	18
Material	18
Process connections	19
Inserts	21
Surface roughness	21
Terminal heads	21
TEHIIIII HEAUS	

Certificates and approvals	23
CE mark	23
Other standards and guidelines	
Electromagnetic compatibility (EMC)	
Test on thermowell	
Material certification	23
Calibration	23
Ordering information	23
Accessories	2.4
Service-specific accessories	
<b>P</b>	
Documentation	2 -

# Function and system design


iTHERM ModuLine thermometer for general applications This thermometer is part of the product line of modular thermometers for industrial applications.


Differentiating factors when selecting a suitable thermometer



#### Advanced technology


"Advanced" thermometers offer cutting-edge technology with features such as a replaceable insert, quick-fastening extension neck (iTHERM QuickNeck), vibration-resistant and fast-response sensor technology (iTHERM StrongSens and QuickSens) and safety features like approvals for use in hazardous areas, second process seal "Dual Seal" or SIL thermometers

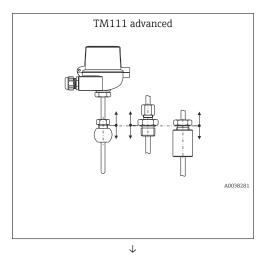


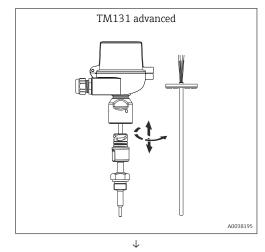

#### Basic technology

"Basic" thermometers are characterized by basic sensor technology and are a low-cost alternative to thermometers with cutting-edge technology. The insert is not always replaceable. Application only in the non-hazardous area.

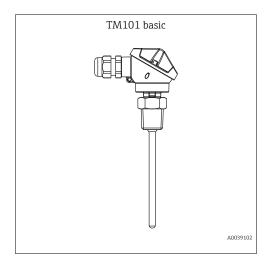

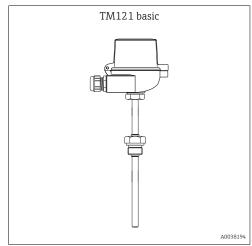

#### Measuring principle

## Resistance thermometer (RTD)

These resistance thermometers use a Pt100 temperature sensor according to IEC 60751. The temperature sensor is a temperature-sensitive platinum resistor with a resistance of 100  $\Omega$  at 0 °C (32 °F) and a temperature coefficient  $\alpha$  = 0.003851 °C<sup>-1</sup>.

#### There are generally two different kinds of platinum resistance thermometers:

- Wire wound (WW): Here, a double coil of fine, high-purity platinum wire is located in a ceramic support. This is then sealed top and bottom with a ceramic protective layer. Such resistance thermometers not only facilitate very reproducible measurements but also offer good long-term stability of the resistance/temperature characteristic within temperature ranges up to 600 °C (1112 °F). This type of sensor is relatively large in size and it is comparatively sensitive to vibrations.
- Thin film platinum resistance thermometers (TF): A very thin, ultrapure platinum layer, approx. 1 µm thick, is vaporized in a vacuum on a ceramic substrate and then structured photolithographically. The platinum conductor paths formed in this way create the measuring resistance. Additional covering and passivation layers are applied and reliably protect the thin platinum layer from contamination and oxidation, even at high temperatures.

The primary advantages of thin film temperature sensors over wire wound versions are their smaller sizes and better vibration resistance. A relatively low principle-based deviation of the resistance/ temperature characteristic from the standard characteristic of IEC 60751 can frequently be observed among TF sensors at high temperatures. As a result, the tight limit values of tolerance category A as per IEC 60751 can only be observed with TF sensors at temperatures up to approx. 300 °C (572 °F).

#### Thermocouples (TC)

Thermocouples are comparatively simple, robust temperature sensors which use the Seebeck effect for temperature measurement: if two electrical conductors made of different materials are connected at a point, a weak electrical voltage can be measured between the two open conductor ends if the conductors are subjected to a thermal gradient. This voltage is called thermoelectric voltage or electromotive force (emf.). Its magnitude depends on the type of conducting materials and the temperature difference between the "measuring point" (the junction of the two conductors) and the "cold junction" (the open conductor ends). Accordingly, thermocouples primarily only measure differences in temperature. The absolute temperature at the measuring point can be determined from these if the associated temperature at the cold junction is known or is measured separately and compensated for. The material combinations and associated thermoelectric voltage/temperature characteristics of the most common types of thermocouple are standardized in the IEC 60584 and ASTM E230/ANSI MC96.1 standards.


#### Measuring system

Endress+Hauser offers a complete portfolio of optimized components for the temperature measuring point – everything you need for the seamless integration of the measuring point into the overall facility. This includes:

- Power supply unit/barrier
- Display units
- Overvoltage protection




For more information, see the brochure 'System Components - Solutions for a Complete Management Principle (TA 2004 CV TOTA) Measuring Point' (FA00016K/EN)

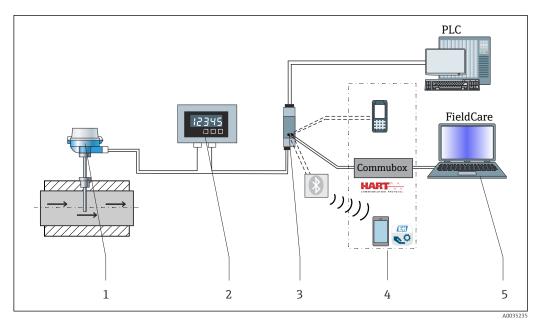

■ 1 Example of application, measuring point layout with additional Endress+Hauser components


- 1 Installed iTHERM thermometer with HART® communication protocol
- 2 RIA15 loop powered process display It is integrated in the current loop and displays the measuring signal or HART® process variables in digital form. The process display unit does not require an external power supply. It is powered directly from the current loop. More information on this can be found in the Technical Information, see "Documentation", .
- Active barrier RN221N The RN221N (24 V DC, 30 mA) active barrier has a galvanically isolated output for supplying voltage to loop-powered transmitters. The universal power supply works with an input supply voltage of 20 to 250 V DC/AC, 50/60 Hz, which means that it can be used in all international power grids. More information on this can be found in the Technical Information, see "Documentation", .
- 4 Communication examples: HART® handheld communicator FieldXpert, Commubox FXA195 for intrinsically safe HART® communication with FieldCare via the USB interface, Bluetooth® technology with SmartBlue App.
- 5 FieldCare is a FDT-based plant asset management tool from Endress+Hauser, more details see section 'accessories'.

## Modular design

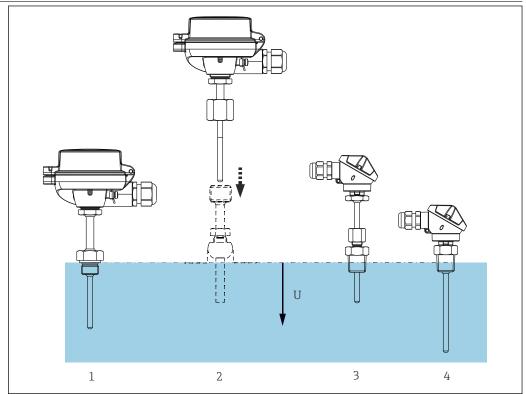

**₽** 2  $The\ thermometer\ is\ designed\ for\ direct\ process\ installation$ 

- 1 With lagging and threaded process connection
- With lagging and cap nut with female thread for installation in an already on-site installed thermowell Process connection via compression fitting 2
- 3
- 4 Threaded process connection without lagging
- Immersion length

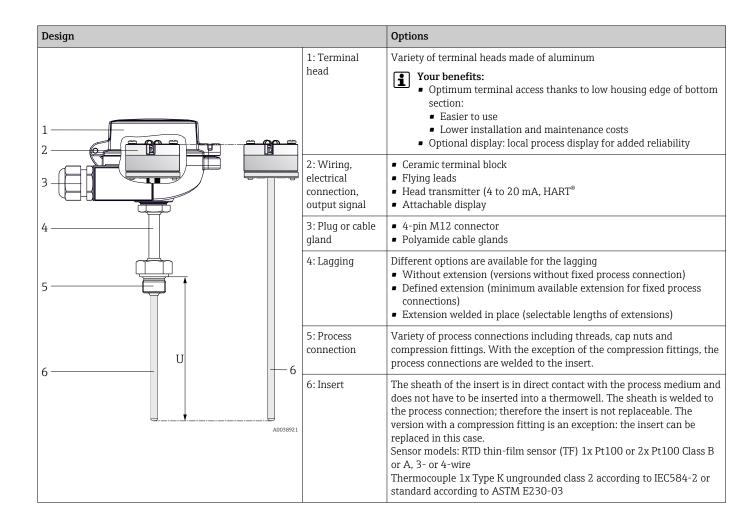

# Input

#### Measured variable

Temperature (temperature-linear transmission behavior)

#### Measuring range

Depends on the type of sensor used

Sensor type	Measuring range
Pt100 thin-film	−50 to +200 °C (−58 to +392 °F)
Thermocouple TC, type K	-40 to +650 °C (-40 to +1202 °F)

# Output

# Output signal

Generally, the measured value can be transmitted in one of two ways:

- Directly-wired sensors sensor measured values forwarded without a transmitter.
- Via all common protocols by selecting an appropriate Endress+Hauser iTEMP temperature transmitter. All the transmitters listed below are mounted directly in the terminal head and wired with the sensory mechanism.

# Family of temperature transmitters

Thermometers fitted with iTEMP transmitters are an installation-ready complete solution to improve temperature measurement by significantly increasing accuracy and reliability, when compared to direct wired sensors, as well as reducing both wiring and maintenance costs.

#### 4 to 20 mA head transmitters

They offer a high degree of flexibility, thereby supporting universal application with low inventory storage. The iTEMP transmitters can be configured quickly and easily at a PC. Endress+Hauser offers free configuration software which can be downloaded from the Endress+Hauser Website. More information can be found in the Technical Information.

#### HART® head transmitters

The transmitter is a 2-wire device with one or two measuring inputs and one analog output. The device not only transfers converted signals from resistance thermometers and thermocouples, it also transfers resistance and voltage signals using HART® communication. Swift and easy operation, visualization and maintenance using universal device configuration tools like FieldCare, DeviceCare or FieldCommunicator 375/475. Integrated Bluetooth® interface for the wireless display of measured values and configuration via E+H SmartBlue (app), optional. For more information, see the Technical Information.

Advantages of the iTEMP transmitters:

- Dual or single sensor input (optionally for certain transmitters)
- Pluggable display (optionally for certain transmitters)
- Unsurpassed reliability, accuracy and long-term stability in critical processes
- Mathematical functions
- Monitoring of the thermometer drift, sensor backup functionality, sensor diagnostic functions
- Sensor-transmitter matching for dual sensor input transmitters, based on Callendar/Van Dusen coefficients


# Power supply




The sensor connection wires are equipped with terminal lugs. The nominal diameter of a lug is 1.3 mm (0.05 in)

#### Terminal assignment

#### Type of sensor connection RTD

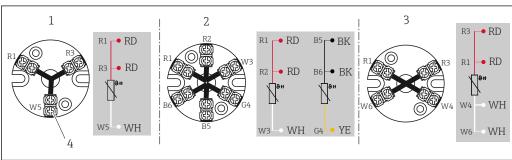


- ₩ 3 Terminal block mounted
- 1 3-wire, single
- 2 2 x 3-wire, single
- 3 4-wire, single
- Outside screw

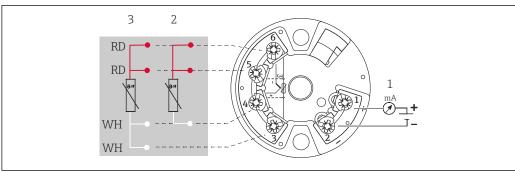

- € 4 Head mounted transmitter TMT18x (single input)
- Power supply head transmitter and analog output 4 to 20 mA or fieldbus connection
- 2 RTD, 3-wire
- 3 RTD, 4-wire


#### Only available with screw terminals

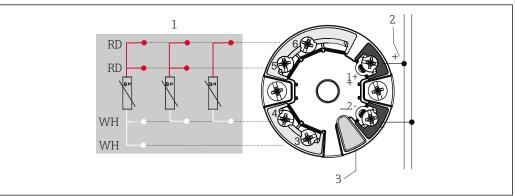


- **₽** 5 *Head mounted transmitter TMT7x (single input)*
- 1 Sensor input, RTD and  $\Omega$ : 4-, 3- and 2-wire
- 2 Power supply or fieldbus connection
- Display connection/CDI interface

Fitted with spring terminals if screw terminals are not explicitly selected or a double sensor is

## Type of sensor connection thermocouple (TC)

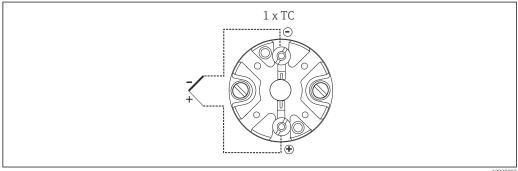

**№** 6 Terminal block mounted

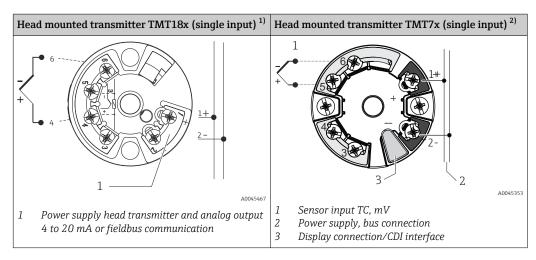

- 1) Fitted with screw terminals
- 2) Fitted with spring terminals if screw terminals are not specifically selected or a double sensor is installed.

#### Thermocouple wire colors

As per IEC 60584	As per ASTM E230
Type K: green (+), white (-)	Type K: yellow (+), red (-)

#### Cable entries

#### See 'Terminal heads' section

The cable entries must be selected during the configuration of the device.

#### Connectors

Endress+Hauser offers a wide variety of connectors for the simple and fast integration of the thermometer into a process control system. The following tables show the PIN assignments of the various plug connector combinations.

### Abbreviations

#1	Order: first transmitter/insert	#2	Order: second transmitter/insert
i	Insulated. Wires marked 'i' are not connected and are insulated with heat shrink tubes.	YE	Yellow
GND	Grounded. Wires marked 'GND' are connected to the internal grounding screw in the terminal head.	RD	Red
BN	Brown	WH	White
GNYE	Green-yellow	PK	Pink
BU	Blue	GN	Green
GY	Gray	BK	Black

#### Terminal head with one cable entry

Plug					
Plug thread	M12				
PIN number	1 2 3				
Electrical connection (terminal head)					
Flying leads, thermocouples are not connected	Not connected (not insulated)				
3-wire terminal block (1x Pt100)	RD RD		WH		
4-wire terminal block (1x Pt100)	- KD	KD	WH	WH	
6-wire terminal block (2x Pt100)	RD (#1) <sup>1)</sup> RD (#1) <sup>1)</sup> WH (#		WH (#1) 1)		
1x TMT 4 to 20 mA or HART®	+	i	-	i	

Plug				
2x TMT 4 to 20 mA or HART® in the terminal head with a high cover	+(#1)	+(#2)	-(#1)	- (#2)
PIN position and color code		4 3 1 BN 2 GN 3 BU 1 2 4 GY	YE	A0018929

1) Second Pt100 is not connected

Connection combination: insert - transmitter

Insert	Transmitter connection 1)
nisert	1x 1-channel
1x Pt100 or 1x TC, flying leads	Pt100 or TC (#1): transmitter (#1)
2x Pt100 or 1x TC, flying leads	Pt100 (#1) : transmitter (#1) Pt100 (#2) insulated
1x Pt100 or 1x TC with terminal block <sup>2)</sup>	Pt100 or TC (#1) : transmitter in cover
2x Pt100 with terminal block <sup>2)</sup>	Pt100 (#1) : transmitter in cover Pt100 (#2) not connected

- 1) If 2 transmitters are selected in a terminal head, transmitter (#1) is installed directly on the insert. Transmitter (#2) is installed in the high cover. A TAG cannot be ordered for the second transmitter as standard. The bus address is set to the default value and, if necessary, must be changed manually before commissioning.
- 2) Only in the terminal head with a high cover, only 1 transmitter possible. A ceramic terminal block is automatically fitted on the insert.

#### Overvoltage protection

To protect against overvoltage in the power supply and signal/communication cables for the thermometer electronics, Endress+Hauser offers the HAW562 surge arrester for DIN rail mounting and the HAW569 for field housing installation.



For more information see the Technical Information "HAW562 Surge arrester" TI01012K and "HAW569 Surge arrester" TI01013K.


# Performance characteristics

#### Reference conditions

These data are relevant for determining the accuracy of the temperature transmitters used. More information on this can be found in the Technical Information of the iTEMP temperature transmitters.

#### Maximum measured error

RTD resistance thermometer corresponding to IEC 60751

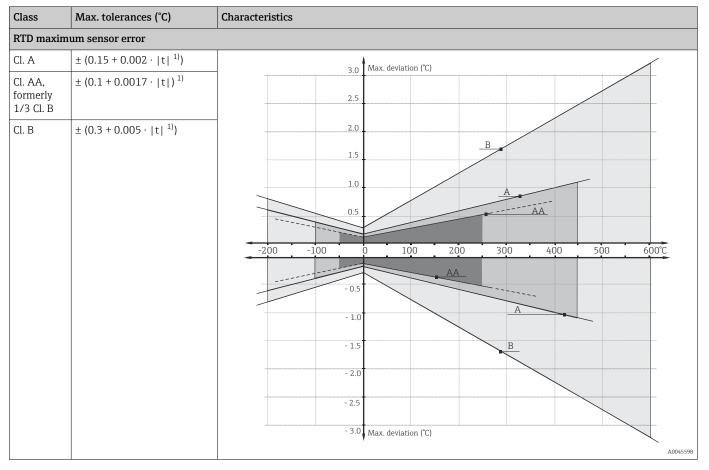

#### 1) |t| = absolute temperature value in °C

In order to obtain the maximum tolerances in  $^{\circ}$ F, the results in  $^{\circ}$ C must be multiplied by a factor of 1.8.

#### Temperature ranges

Sensor type	Operating temperature range (Class A and B)
Pt100 (TF)	−50 to +200 °C (−58 to +392 °F)

Permissible deviation limits of thermoelectric voltages from the standard characteristic for thermocouples as per IEC 60584 or ASTM E230/ANSI MC96.1:

Standard	Туре	Stand	lard tolerance Specia		Special tolerance	
IEC 60584		Class	Deviation	Class	Deviation	
	K (NiCr-NiAl)	2	±2.5 °C (-40 to 333 °C) ±0.0075  t  (333 to 1200 °C)	1	±1.5 °C (-40 to 375 °C) ±0.004  t  (375 to 1000 °C)	

Standard	Туре	Standard tolerance	Special tolerance	
ASTM E230/ANSI		Deviation, the larger value applies in each case		
MC96.1	K (NiCr- NiAl)	±2.2 K or ±0.02  t  (-200 to 0 °C) ±2.2 K or ±0.0075  t  (0 to 1260 °C)	±1.1 K or ±0.004  t  (0 to 1260 °C)	

# Influence of ambient temperature

Depends on the head transmitter used. For details, see the Technical Information.  $\label{eq:continuous}$ 

#### Self heating

RTD elements are passive resistors that are measured using an external current. This measurement current causes a self-heating effect in the RTD element itself which in turn creates an additional measurement error. In addition to the measurement current, the size of the measurement error is also affected by the temperature conductivity and flow velocity of the process. This self-heating error is negligible when an Endress+Hauser iTEMP temperature transmitter (very small measurement current) is connected.

#### Response time

Tests have been performed in water at 0.4~m/s (according to IEC 60751) and with a 10~K temperature step change.

Standard Pt100, typical values	t <sub>50</sub>	t <sub>90</sub>
Direct contact: TF, WW 3 or 6 mm diameter	5 s	11 s

Type J, K, N (TC), typical values	t <sub>50</sub>	t <sub>90</sub>
Direct contact 3 or 6 mm diameter	2.5 s	7 s

#### Calibration

#### Calibration of thermometers

Calibration involves comparing the measured values of a device under test (DUT) with those of a more precise calibration standard using a defined and reproducible measurement method. The aim is to determine the deviation of the DUT's measured values from the true value of the measured variable. Two different methods are used for thermometers:

- Calibration at fixed-point temperatures, e.g. at the freezing point of water at 0 °C,
- Calibration compared against a precise reference thermometer.

The thermometer to be calibrated must display the fixed point temperature or the temperature of the reference thermometer as accurately as possible. Temperature-controlled calibration baths with very homogeneous thermal values, or special calibration furnaces into which the DUT and the reference thermometer, where necessary, can project to a sufficient degree, are typically used for thermometer calibrations. The measurement uncertainty can increase due to heat dissipation errors and short immersion lengths. The existing measurement uncertainty is listed on the individual calibration certificate. For accredited calibrations according to ISO17025, the measurement uncertainty shouldn't be twice as high as the accredited measurement uncertainty. If this is exceeded, only a factory calibration can be performed.

#### **Evaluation of thermometers**

If a calibration with an acceptable uncertainty of measurement and transferable measurement results is not possible, Endress+Hauser offers customers a thermometer evaluation measurement service, if technically feasible. This is the case when:

- The process connections/flanges are too big or the immersion length (IL) is too short to allow the DUT to be immersed sufficiently in the calibration bath or furnace (see the following table), or
- Due to heat conduction along the thermometer tube, the resulting sensor temperature generally deviates significantly from the actual bath/furnace temperature.

The measured value of the DUT is determined using the maximum possible immersion depth and the specific measuring conditions and measurement results are documented on an evaluation certificate.

#### Sensor-transmitter matching

The resistance/temperature curve of platinum resistance thermometers is standardized but in practice it is rarely possible to keep to the values precisely over the entire operating temperature range. For this reason, platinum resistance sensors are divided into tolerance classes, such as Class A, AA or B as per IEC 60751. These tolerance classes describe the maximum permissible deviation of the specific sensor characteristic curve from the standard curve, i.e. the maximum temperature-dependent characteristic error that is permitted. The conversion of measured sensor resistance values to temperatures in temperature transmitters or other meter electronics is often susceptible to considerable errors as the conversion is generally based on the standard characteristic curve.

When using temperature transmitters from Endress+Hauser, this conversion error can be reduced significantly by sensor-transmitter matching:

- Calibration at three temperatures at least and determination of the actual temperature sensor characteristic curve,
- Adjustment of the sensor-specific polynomial function using Calendar-van Dusen (CvD) coefficients.
- Configuration of the temperature transmitter with the sensor-specific CvD coefficients for resistance/temperature conversion, and
- another calibration of the reconfigured temperature transmitter with connected resistance thermometer.

Endress+Hauser offers this kind of sensor-transmitter matching as a separate service. Furthermore, the sensor-specific polynomial coefficients of platinum resistance thermometers are always provided on every Endress+Hauser calibration certificate where possible, e.g. at least three calibration points, so that users themselves can also appropriately configure suitable temperature transmitters.

For the device, Endress+Hauser offers standard calibrations at a reference temperature of -80 to +600 °C (-112 to +1112 °F) based on the ITS90 (International Temperature Scale). Calibrations in other temperature ranges are available from your Endress+Hauser sales center on request. Calibrations are traceable to national and international standards. The calibration certificate is referenced to the serial number of the device. Only the insert is calibrated.

#### Minimum insertion length (IL) for inserts required to perform a correct calibration



Due to restrictions of the furnace geometries, minimum immersion lengths must be maintained at high temperatures in order to be able to perform a calibration with acceptable measurement uncertainty. The same applies when a temperature head transmitter is used. Due to the heat dissipation, minimum immersion lengths must be maintained in order to ensure the functionality of the transmitter -40 to +85 °C (-40 to +185 °F).

Calibration temperature	Minimum immersion length (IL) in mm without head transmitter
−196 °C (−320.8 °F)	120 mm (4.72 in) <sup>1)</sup>
-80 to 250 °C (−112 to 482 °F)	No minimum immersion length needed <sup>2)</sup>
251 to 550 °C (483.8 to 1022 °F)	300 mm (11.81 in)
551 to 600 °C (1023.8 to 1112 °F)	400 mm (15.75 in)

- 1) With TMT a minimum of 150 mm (5.91 in) is required
- 2) At a temperature of +80 to +250 °C (+176 to +482 °F) with TMT a minimum of 50 mm (1.97 in) is required

## Insulation resistance

■ RTD:

Insulation resistance according to IEC 60751 > 100 M $\Omega$  at 25 °C between terminals and sheath material measured with a minimum test voltage of 100 V DC

TC:

Insulation resistance according to IEC 1515 between terminals and sheath material with a test voltage of 500 V DC:


- > 1 G $\Omega$  at 20 °C
- > 5  $M\Omega$  at 500  $^{\circ}$ C

## Installation

#### Orientation

No restrictions. However, self-draining in the process should be guaranteed depending on the application.

#### **Installation instructions**

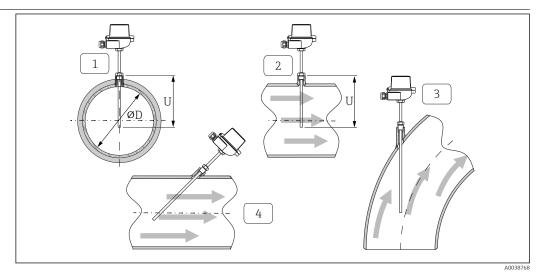

■ 7 Installation examples

- 1 2 In pipes with a small cross-section, the sensor tip should reach or extend slightly past the center axis of the pipe (=U).
- 3 4 Slanted orientation.

The immersion length of the thermometer influences the accuracy. If the immersion length is too small, errors in the measurement are caused by heat conduction via the process connection and the container wall. Therefore, if installing in a pipe the immersion length should be at least half the pipe diameter. Installation at an angle (see 3 and 4) could be another solution. When determining the immersion length or installation depth all the parameters of the thermometer and of the process to be measured must be taken into account (e.g. flow velocity, process pressure).

The counterparts for process connections and seals are not supplied with the thermometer and must be ordered separately if needed.

# **Environment**

Ambient temperature range	Terminal head Temperature in °C (°F)						
	Without mounted head transmitter Depends on the terminal head used and the cable gland or fieldbus connector, see Terminal heads' section						
	With mounted head transmitter	n mounted head transmitter —40 to 85 °C (-40 to 185 °F)					
	With mounted head transmitter and display						
Storage temperature	For information, see the ambient tem	perature					
Humidity	Depends on the transmitter used. If Endress+Hauser iTEMP head transmitters are used:  Condensation permitted as per IEC 60 068-2-33  Max. rel. humidity: 95% as per IEC 60068-2-30						
Climate class	As per EN 60654-1, Class C						
Degree of protection	Max. IP 66 (NEMA Type 4x encl.), depending on the design (terminal head, connector, etc.)						
Shock and vibration resistance	The Endress+Hauser inserts exceed the IEC 60751 requirements stating a shock and vibration resistance of 3 g within a range of 10 to 500 Hz.						
Electromagnetic compatibility (EMC)	Depends on the head transmitter used. For details see the Technical Information.						

# **Process**

#### Process temperature range

Depends on the type of sensor and material used, maximum -200 to +1100 °C (-328 to +2012 °F).

#### Process pressure range

 $P_{\text{max.}} = 50 \text{ bar } (725 \text{ psi})$ 

The maximum possible process pressure depends on various influencing factors, such as the design, process connection and process temperature. For information on the maximum possible process pressures for the individual process connections, see the 'Process connection' section.

# Mechanical construction


#### Design, dimensions


All dimensions in mm (in). The design of the thermometer depends on the general design version used.



Various dimensions, such as the immersion length U for example, are variable values and are therefore indicated as items in the following dimensional drawings.

#### Variable dimensions:

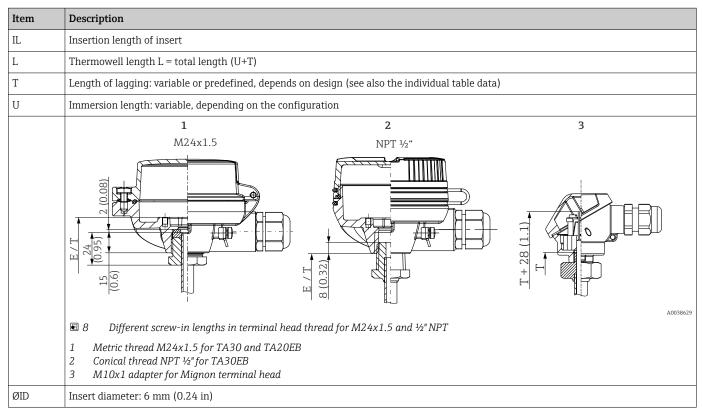

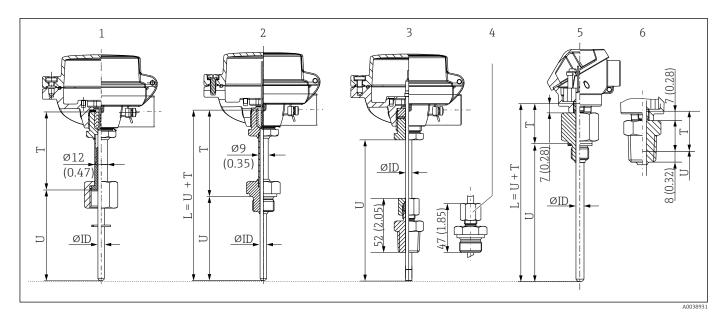


- With lagging and cap nut, female thread, available in  $G\frac{1}{2}$ " and  $G\frac{1}{4}$ " type
- 2 With lagging
- 3 With compression fitting ½" NPT thread, spring loaded version as option
- 4 Compression fitting G½"
- Without lagging, terminal head (Mignon head) process connection, metric thread version
- 6 Without lagging, terminal head process connection, ½" NPT thread version

#### Minimum length definition

Thermometer version	U	Т
1	≥ 30 mm (1.18 in)	≥ 85 mm (3.35 in)
2		
3 + 4	≥ 70 mm (2.76 in)	-
5 + 6	≥ 30 mm (1.18 in)	Length is predefined by design:  38 mm (1.5 in) 30 mm (1.18 in), if Mignon terminal head is used

The insert can be replaced in version 3 (4). Calculation of insert length: IL = U + 39 mm (15.4 in). The insert cannot be replaced in all other versions.

As illustrated in the following figure, the lagging length may influence the temperature in the terminal head. This temperature must remain within the limit values defined in the "Operating conditions" section.

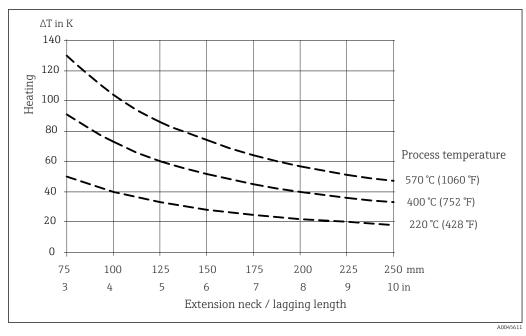

■ 9 Heating of the terminal head as a function of the process temperature. Temperature in terminal head = ambient temperature 20 °C (68 °F) +  $\Delta T$ 

The diagram can be used to calculate the transmitter temperature.

**Example:** At a process temperature of 220 °C (428 °F) and with a lagging length of 100 mm (3.94 in), the heat conduction is 40 K (72 °F). The transmitter temperature is therefore 40 K (72 °F) plus the ambient temperature, e.g. 25 °C (77 °F): 40 K (72 °F) + 25 °C (77 °F) = 65 °C (149 °F).

Result: The temperature of the transmitter is o.k., the length of the lagging is sufficient.

### Weight

 $1\ \text{to}\ 2.5\ \text{kg}$  (2.2 to 48.5 lbs) for standard options.

#### Material

The temperatures for continuous operation specified in the following table are only intended as reference values for use of the various materials in air and without any significant mechanical load. The maximum operating temperatures can be reduced considerably in cases where abnormal conditions such as high mechanical load occur or in aggressive media.



Please be aware, the maximum temperature is always also depending on the used temperature sensor!

Material name	Short form	Recommended max. temperature for continuous use in air	Properties
AISI 316L/1.4404 1.4435	X2CrNiMo17-12-2 X2CrNiMo18-14-3	650 °C (1202 °F)	<ul> <li>Austenitic, stainless steel</li> <li>High corrosion resistance in general</li> <li>Particularly high corrosion resistance in chlorine-based and acidic, non-oxidizing atmospheres through the addition of molybdenum (e.g. phosphoric and sulfuric acids, acetic and tartaric acids with a low concentration)</li> <li>Increased resistance to intergranular corrosion and pitting</li> <li>Compared to 1.4404, 1.4435 has even higher corrosion resistance and a lower delta ferrite content</li> </ul>
Alloy600/2.4816	NiCr15Fe	1100°C (2012°F)	<ul> <li>A nickel/chromium alloy with very good resistance to aggressive, oxidizing and reducing atmospheres, even at high temperatures</li> <li>Resistance to corrosion caused by chlorine gases and chlorinated media as well as many oxidizing mineral and organic acids, sea water etc.</li> <li>Corrosion from ultrapure water</li> <li>Not to be used in sulfur-containing atmospheres</li> </ul>

## **Process connections**

# Threaded process connection

		Version		Dimensions		Technical
Туре				Thread length TL in mm (in)	Width across flats AF	properties
	SW/AF	M	M20x1.5	14 mm (0.55 in)	27	• P <sub>max.</sub> = 25 bar
E			M18x1.5	12 mm (0.47 in)	24	(362 psi) at max. 150 °C
\	TL	G	G ½"	15 mm (0.6 in)	27	(302 °F)
ML,			G 1⁄4"	12 mm (0.47 in)	24	• P <sub>max.</sub> = 40 bar (580 psi) at
L		NPT	NPT ½"	8 mm (0.32 in)	22	max. 100 °C (212 °F)
	A0008620					
€ 10	Cylindrical (left side) and conical (right side) version					

G¾"  19.5 mm (0.77 in)  32 mm (1.26 in)  not design process connection available thermomy without a	Connection thread Cap nut <sup>1)</sup>	Version Th	hread length TL	Wrench size	
G%"  19.5 mm (0.77 in)  32 mm (1.26 in)  process connection available thermome without a thermower.		G½" 15	5.5 mm (0.61 in)	27 mm (1.06 in)	The cap nuts are
	H H 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	G¾" 19	9.5 mm (0.77 in)	32 mm (1.26 in)	not designed as process connections. This connection is only available for thermometers without a thermowell.
1 Cap nut thread					

- 1) For selection without thermowell. Only available for installation in an existing thermowell. Special attention has to be paid to the length as the insert is not springload!
  - The 316L compression fittings can only be used once due to deformation. This applies to all the components of the compression fittings! A replacement compression fitting must be secured at another point (grooves in thermowell). PEEK compression fittings must never be used at a temperature that is lower than the temperature present when the compression fitting is secured. This is because the fitting would no longer be leak-tight as a result of heat contraction of the PEEK material.

For higher requirements: SWAGELOCK or similar fittings are urgently recommended.

#### Compression fitting

Type TK40	Version	Dimensions	Technical properties	
Type IN-10	VCISIOII	Ø di Wrench size		reclinical properties
1 Nut 2 Ferrule 3 Process connection	NPT ½", L = approx. 52 mm (2.05 in) G ½", L = approx. 47 mm (1.85 in) Ferrule material PEEK or 316L Tightening torque: ■ 10 Nm (PEEK) ■ 25 Nm (316L)	6 mm (0.24 in)	G½": 27 mm (1.06 in) ½" NPT: 24 mm (0.95 in)	■ P <sub>max.</sub> = 5 bar (72.5 psi), at T = +180 °C (+356 °F) for PEEK material ■ P <sub>max.</sub> = 40 bar (104 psi) at T = +200 °C (+392 °F) for 316L ■ P <sub>max.</sub> = 25 bar (77 psi) at T = +400 °C (+752 °F) for 316L
Spring loaded version as option	1			
A0038944	G½" or NPT ½", spring loaded, L = approx. 60 mm (2.36 in)	6 mm (0.24 in)	G½": 27 mm (1.06 in) ½" NPT: 24 mm (0.95 in)	It is not pressure tight. Only to be used in combination with thermowell or in medium air. Tightening torque: G½": 40 Nm ½" NPT: 55 Nm
1 Spring				

#### **Inserts**

The device has a non-replaceable insert. The sheath is welded to the process connection to ensure a leak-tight condition.  $^{1)}$ 

Sensor	Standard thin-film		
Sensor design; connection method	1x or 2x Pt100, 3- or 4-wire, basic version, stainless steel sheath		
Vibration resistance of the insert tip	Up to 3g		
Measuring range; accuracy class	−50 to +200 °C (−58 to +392 °F), Class A or B		
Diameter	6 mm (1/4 in)		

TC thermocouples	Туре К	
Sensor design	Mineral insulated, alloy600 sheathed TC cable	
Vibration resistance of the insert tip	Up to 3g	
Measuring range	−270 to 1100 °C (−454 to 2012 °F)	
Connection type	Ungrounded hot junction	
Temperature-sensitive length	Insert length	
Diameter	6 mm (1/4 in)	

#### Surface roughness


Values for wetted surfaces:

Standard surface	$R_a \leq 0.76 \ \mu m \ (0.03 \ \mu in)$
------------------	---


#### Terminal heads


All terminal heads have an internal shape and size in accordance with DIN EN 50446, flat face and a thermometer connection with a M24x1.5 or  $\frac{1}{2}$ " NPT thread. All dimensions in mm (in). The sample cable glands in the diagrams correspond to M20x1.5 connections with non-Ex polyamide cable glands. Specifications without head transmitter installed. For ambient temperatures with head transmitter installed, see the Environment section.


As a special feature, Endress+Hauser offers terminal heads with optimized terminal accessibility for easy installation and maintenance.

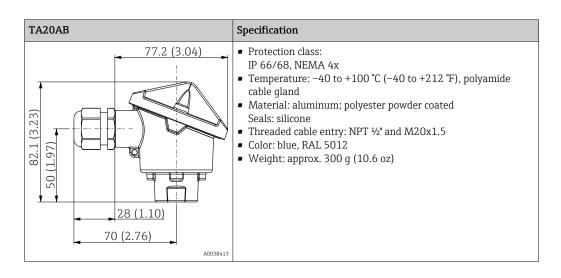

<sup>1)</sup> Compression fittings are an exception: the insert can be replaced in this case.

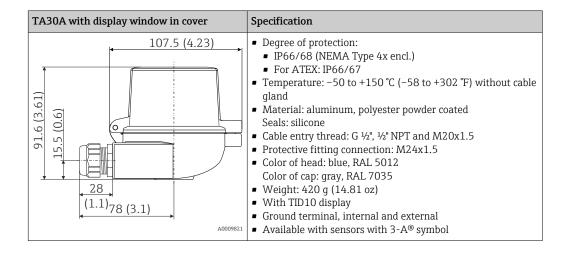

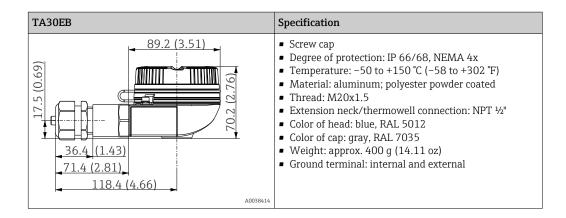

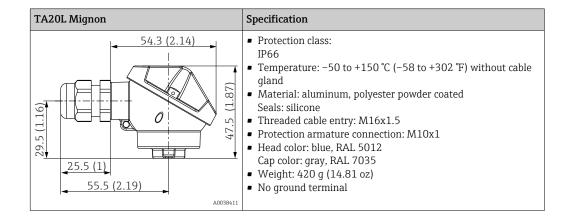

#### Cable glands and connectors

Type 1)	Suitable for cable entry	Degree of protection	Temperature range
<ul> <li>1x cable gland, polyamide</li> <li>1x plug (M12x1.5, 4-pin, 316)</li> </ul>	<ul> <li>TA20AB: 1x NPT ½" or 1x M20x1.5</li> <li>TA30EB: 1x M20x1.5</li> <li>TA30A: 1x M20x1.5</li> <li>TA20L Mignon: 1x M16x1.5</li> </ul>	IP68	-40 to +100 °C (-40 to +212 °F)

1) Not available for TA20L Mignon terminal head

# Certificates and approvals

#### CE mark

The product meets the requirements of the harmonized European standards. As such, it complies with the legal specifications of the EC directives. The manufacturer confirms successful testing of the product by affixing to it the CE-mark.

# Other standards and quidelines

- EN 60079: ATEX certification for hazardous areas
- IEC 60529: Degrees of protection provided by enclosures (IP code)
- IEC 61010-1: Safety requirements for electrical equipment for measurement, control and laboratory use
- IEC 60751: Industrial platinum resistance thermometers
- EN 50281-1-1: Electrical apparatus protected by enclosures
- DIN 43772: Protection tubes
- DIN EN 50446: Terminal heads

# Electromagnetic compatibility (EMC)

EMC to all relevant requirements of the IEC/EN 61326-series and NAMUR Recommendation EMC (NE21). For details, refer to the Declaration of Conformity.

Maximum fluctuations during EMC-tests: < 1 % of measuring span.

Interference immunity to IEC/EN 61326-series, requirements for industrial areas

Interference emission to IEC/EN 61326-series, electrical equipment Class B

#### Test on thermowell

Thermowell pressure tests are carried out in accordance with the specifications in DIN 43772. With regard to thermowells with tapered or reduced tips that do not comply with this standard, these are tested using the pressure of corresponding straight thermowells. Sensors for use in hazardous areas are also always subjected to a comparative pressure during the tests. Tests according to other specifications can be carried out on request. The liquid penetration test verifies that there are no cracks in the welded seams of the thermowell.

#### Material certification

The material certificate 3.1 (according to standard EN 10204) can be requested separately. The "short form" certificate includes a simplified declaration with no enclosures of documents related to the materials used in the construction of the single sensor and guarantees the traceability of the materials through the identification number of the thermometer. The data related to the origin of the materials can subsequently be requested by the client if necessary.

#### Calibration

The "Factory calibration" is carried out according to an internal procedure in a laboratory of Endress +Hauser accredited by the European Accreditation Organization (EA) to ISO/IEC 17025. A calibration which is performed according to EA guidelines (SIT/Accredia) or (DKD/DAkkS) may be requested separately. The calibration is performed on the replaceable insert of the thermometer. In the case of thermometers without a replaceable insert, the entire thermometer - from the process connection to the tip of the thermometer - is calibrated.

# Ordering information

Detailed ordering information is available for your nearest sales organization www.addresses.endress.com or in the Product Configurator under www.endress.com :

- Click Corporate
- 2. Select the country
- Click Products
- 4. Select the product using the filters and search field
- 5. Open the product page

The Configuration button to the right of the product image opens the Product Configurator.



## Product Configurator - the tool for individual product configuration

- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

# Accessories

Various accessories, which can be ordered with the device or subsequently from Endress+Hauser, are available for the device. Detailed information on the order code in question is available from your local Endress+Hauser sales center or on the product page of the Endress+Hauser website: www.endress.com.

#### Service-specific accessories

Accessories	Description		
Applicator	Software for selecting and sizing Endress+Hauser measuring devices:  Calculation of all the necessary data for identifying the optimum measuring device: e.g. pressure loss, accuracy or process connections.  Graphic illustration of the calculation results		
	Administration, documentation and access to all project-related data and parameters over the entire life cycle of a project.		
	Applicator is available: Via the Internet: https://portal.endress.com/webapp/applicator		

Accessories	Description				
Configurator	Product Configurator - the tool for individual product configuration  Up-to-the-minute configuration data  Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language  Automatic verification of exclusion criteria  Automatic creation of the order code and its breakdown in PDF or Excel output format  Ability to order directly in the Endress+Hauser Online Shop  The Configurator is available on the Endress+Hauser website at: www.endress.com -> Click "Corporate" -> Select your country -> Click "Products" -> Select the product using the filters and search field -> Open product page -> The "Configure" button to the right of the product image opens the Product Configurator.				
DeviceCare SFE100	Configuration tool for devices via fieldbus protocols and Endress+Hauser service protocols.  DeviceCare is the tool developed by Endress+Hauser for the configuration of Endress+Hauser devices. All smart devices in a plant can be configured via a point-to-point or point-to-bus connection. The user-friendly menus enable transparent and intuitive access to the field devices.  For details, see Operating Instructions BA00027S				
FieldCare SFE500	FDT-based plant asset management tool from Endress+Hauser. It can configure all smart field units in your system and helps you manage them. By using the status information, it is also a simple but effective way of checking their status and condition.  For details, see Operating Instructions BA00027S and BA00065S				

Accessories	Description
W@M	Life cycle management for your plant W@M offers assistance with a wide range of software applications over the entire process: from planning and procurement to the installation, commissioning and operation of the measuring devices. All the relevant information is available for every measuring device over the entire life cycle, such as the device status, device-specific documentation, spare parts etc.  The application already contains the data of your Endress+Hauser device. Endress+Hauser also takes care of maintaining and updating the data records.
	W@M is available: Via the Internet: www.endress.com/lifecyclemanagement

# **Documentation**

Operating manual for modular thermometers in industrial applications (BA01915T/09)

Technical Information:

iTEMP temperature head transmitter:

- TMT71, PC-programmable, single-channel, RTD, TC, Ω, mV (TI01393T/09/en)
   HART® TMT72, PC-programmable, single-channel, RTD, TC, Ω, mV (TI01392T/09/en)
   TMT180, PC-programmable, single-channel, Pt100 (TI088R/09/en)



